



**ALTENBURGER
INDUSTRIE-
NÄHMASCHINEN GmbH**


Einstellanleitung

Überwendlich - Nähmaschinen

Klasse 8516-514-100-07-25../..

Einstellwerte BR 8516

(Bearbeitungsstand 06/93)

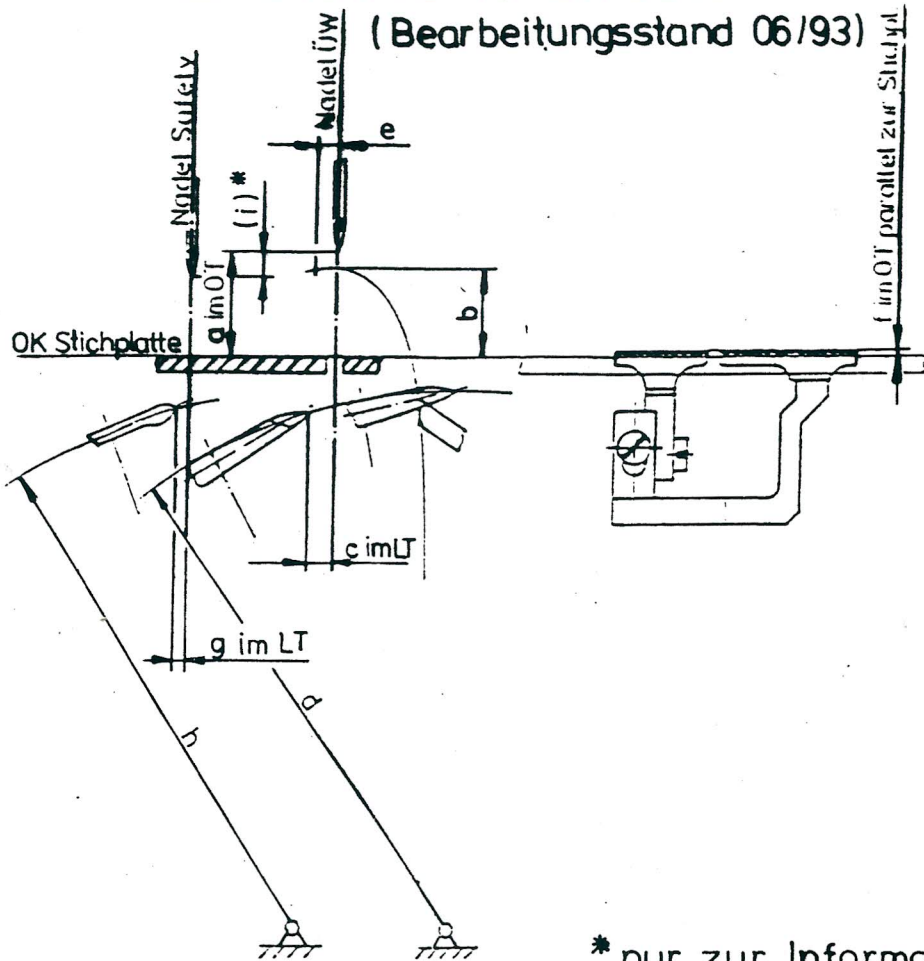

* nur zur Information

Klasse 8516	Einstellwerte									
	a	b	c	d	e	f	g	h	i	
504 - 100 - 07 - 00 - ...	10,0	12,0	3,4	65,1	4,5	1	-	-	-	
60-er Nadel	11,0	12,5	2,4	65,1	4,5	1	-	-	-	
504 - 101 - 09 - 00 - ...	11,8	14,0	3,4	65,1	4,5	1	-	-	-	
514 - 100 - 07 - 25 - ...	10,5	13,1	5,4	65,1	6,7	1	-	-	1,2	
516 - 100 - 08 - ... - ...	11,8	14,0	3,4	65,1	4,5	1	2,0	61,5	0,6	

